

GETTING STARTED

Please fully charge device before long-term use. See "Charging the Device".

Heat Mode

Press & hold button for 3-seconds until red light begins to flash.

Device will now be in HEAT mode until turned off by holding button again for 3-seconds or battery depletes. Blue lights indicate remaining battery capacity.

NOTE: This function only works when POWER BANK mode in OFF.

Power Bank Mode

Press button 1 time. Blue battery indicator lights will turn on and stay lit.

Device has now entered POWER BANK mode until turned off or battery depletes. Devices may be charged by connecting any USB charge cord to the USB port labeled "OUT DC5V/1.5A". Works with any iPhone or Android phones and many other accessories using their own provided USB charge cables (not included).

Blue lights indicate remaining life.

NOTE: This function may only be used while heat mode is off.

Flashlight Mode

Press button 2 times consecutively. FLASHLIGHT will turn on. Press button 2 times again to turn the flashlight off.

NOTE: This feature will work while in HEAT or POWER BANK mode.

CHARGING THE DEVICE

The supplied cable or any other standard charge cable may be used to charge the device by plugging the smaller microUSB end into the device and the larger USB end into any standard USB charging port such as a USB wall adapter, computer USB port, car charger, and more. Battery three light capacity indicator will display internal battery charge status. Battery is fully charged when final third indicator light is lit. Charge cable may be unplugged. Full charging cycle takes approximately 4-hrs. It is recommended to recharge battery often for best results.

NOTE: A completely drained battery may not show status light when initially connected to charger. Please leave connected for at least 15-minutes to register status light.

SPECIFICATIONS

Battery Capacity: 9900mAh

Input: MicroUSB 5V/1.0A DC

Output: USB 5V/2.0A DC



Warnings:

Do not expose to high temperatures or fire

Keep away from water and other liquids

Surface clean only – do not immerse

Use by children should be under a responsible adult's supervision

When storing BoneView HotPocket between uses, ensure the battery is charged. The battery should be charged at least once every 3 months during longer-term storage.

SUPPORT INFORMATION

Please email BoneView directly: Support@BoneView.com

Or call 339-OPG-INFO

Take advantage of BoneView's generous warranty support and register your product today -

Visit: www.Boneview.com/Warranty

We PROUDLY honor BoneView's 100% Customer Satisfaction Guarantee, so **please contact us directly** for assistance, returns, exchanges, refunds, or anything else. Let us make our products and service exceed your expectations!

SUPPORT CONTACT

NEED HELP?

Please visit us at: www.BoneView.com

Contact Support at: Support@BoneView.com

(339)OPG-INFO



Don't return product to original purchase location. Contact us directly for returns, replacement, or support: Support@BoneView.com

We are always looking to hear product feedback, reviews, and see photos from fellow outdoors enthusiasts testing our products in the field.



Good luck this season and please share your photos and success stories with us online using **#BoneView** on Instagram or Facebook.

BONUS GIFT OFFER

Within 30 days of qualified purchase you have the chance to snag **One FREE** additional accessory.

If you don't already have an item below, this might be your only chance to get this steal of a deal! Just pay Shipping & Handling.

To grab this offer while there is still time, please visit:
[**BoneView.com/BonusGift**](http://BoneView.com/BonusGift)

PROTECTIVE ZIPPER STORAGE CASE

"Secure your BoneView HotPocket Hand Warmer"



DISCLAIMER: Outdoor Performance Gear, LLC d/b/a BoneView shall not be liable for any damage, loss, or injury from the use or misuse of this product.

manual print size front and back:

90-mm (wide) x 195-mm (tall)

Folded size is 90mm (wide) x 65mm (tall)
when folded to thirds